



ExCos-P Pressure sensor 20 Pa ... 7.500 Pa

Electrical, explosion-proof pressure/differential pressure sensors 24 VAC/DC supply voltage, 0...10 V/(0)4...20 mA analogue output EC type-approved in acc. with ATEX directive 2014/34/EU for zone 1, 2, 21, 22

ExCos - P- ...
ExCos - ... - CT
ExCos - ... - OCT
ExCos - ... - VA
ExCos - ... - OVA

Subject to change!

Compact. Easy installation. Universal. Cost effective. Safe.

Туре	Sensor	Supply	Range	min. Setting	max. Pressure	Output	Ex-i output	Wiring diagram
ExCos- P- 100	Pressure/Diff. press.	24 VAC/DC	± 100 Pa	20 Pa	25.000 Pa	(0)420 mA / 010 V	-	SB 1.0
ExCos- P- 250	Pressure/Diff. press.	24 VAC/DC	± 250 Pa	50 Pa	25.000 Pa	(0)420 mA / 010 V	_	SB 1.0
ExCos- P- 500	Pressure/Diff. press.	24 VAC/DC	± 500 Pa	100 Pa	50.000 Pa	(0)420 mA / 010 V	_	SB 1.0
ExCos- P-1250	Pressure/Diff. press.	24 VAC/DC	± 1.250 Pa	250 Pa	50.000 Pa	(0)420 mA / 010 V	-	SB 1.0
ExCos- P-2500	Pressure/Diff. press.	24 VAC/DC	± 2.500 Pa	500 Pa	50.000 Pa	(0)420 mA / 010 V	-	SB 1.0
ExCos- P-5000	Pressure/Diff. press.	24 VAC/DC	± 5.000 Pa	1.000 Pa	75.000 Pa	(0)420 mA / 010 V	_	SB 1.0
ExCos- P-7500	Pressure/Diff. press.	24 VAC/DC	± 7.500 Pa	1.500 Pa	120.000 Pa	(0)420 mA / 010 V	_	SB 1.0
ExCos- P CT	Types as above with aluminium housing and seawater resistant coating (cable glands M16 brass nickel-plated, screws in stainless steel)							
ExCos- P OCT	ExCos- P OCT Types as above, offshore version with aluminium housing and seawater resistant coating (stainless steel tubes for clamping ring connection,							
	cable glands M20 brass nickel-plated, screws in stainless steel)							
ExCos- P VA	Types as above with stainless steel housing for aggressive ambient (cable glands M20 brass nickel-plated, screws in stainless steel)							
ExCos- P OVA Types as above, offshore version with stainless steel housing for aggressive ambient (tubes for clamping ring connection and screws in stainless steel,								
	cable glands M20 brass nickel-plated)							

Product views and applications

Pressure/Differential press. ...Cos-P...-CT











Description

The ExCos-P-... pressure sensor generation from ± 100 Pa to ± 7.500 Pa (acc. to type) is a revolution for differential pressure measuring in HVAC systems, in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in hazardous areas zone 1, 2 (gas) and zone 21, 22 (dust).

Highest protection class (ATEX) and IP66 protection, small dimensions, universal functions and technical data guarantee safe operation even under difficult environmental conditions.

All sensors are programmable on site without any additional tools. The measuring ranges are scalable within the maximum ranges. At ...Cos-P-100 the smallest ΔP range is 20 Pa. The analogue output signal is either 0...10 VDC or (0)4...20 mA and can be selected on site. The integrated display is for parametrisation and an actual value indication at working mode (can be switched off as needed).

...Cos-P-...-OCT and ...-OVA offshore versions are equipped with stainless steel tubing \emptyset 6 mm.

Highlights

- ► For all types of gases, mists, vapours and dust for use in zone 1, 2, 21 and 22
- ► Power supply 24 VAC/DC
- ► Scalable analogue output, selectable 0...10 V / (0)4...20 mA
- ► Integrated Ex-e terminal box
- ► No addional Ex-i module required
- ▶ No intrinsically safe wiring/installation between panel and sensor required
- ▶ No intrinsically safe wiring/installation and no space in the panel required
- ► Display with backlight, can be switched off
- ▶ Password locking
- ▶ Down to -20 °C ambient temperature applicable
- ► Compact design and small dimension
- ▶ Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
- ► IP66 protection
- ▶ Offshore versions with pressure tube connection for clamping ring Ø 6 mm
- ► Fulfils K1 according to TRGS 725

ExCos-P_e V04 – 22-Feb-202



...-OCT

...-VA ...-OVA



Technical data

24 VAC/DC ±20 % (19,2...28,8 VAC/DC), 50/60 Hz Supply voltage, frequency

Current, power consumption 150 mA, ~ 4 W, internal fuse 500 mAT, without bracket, not removable

...-CT

Galvanic isolation Supply for analogue in- and outputs min. 1,5 kV, supply for relay output min. 1,5 kV

Electrical connection Terminals 0,14...2,5 mm² at integrated Ex-e terminal box, stripping length 9 mm, torque 0,4...0,5 Nm, equipotential bonding 4 mm²

 $2 \times M16 \times 1,5$ mm, Ex-e approved, for cable diameter ~ Ø 5...9 mm Cable glands

Cable glands ...-CT $2 \times M16 \times 1,5$ mm, Ex-e approved, brass nickel-plated, for cable diameter ~ Ø 6...10 mm

...-VA, ...-OCT, ...-OVA 2 × M20 × 1,5 mm, Ex-e approved, brass nickel-plated, for cable diameter ~ Ø 6...13 mm

Protection class Class I (grounded)

2 × 16 digits, dot-matrix display, backlit, for configuration, user guidance, parameter and actual value indication Display

Control elements 3 buttons for configuration

Housing material Aluminium die-cast housing, coated. Optional with seawater resistant coating (...-CT/...-OCT) or stainless steel housing,

№ 1.4581 / UNS-J92900 / similar AISI 316Nb (...-VA/...-OVA)

Dimensions (L × W × H) Aluminium housing ~ 180 × 107 × 66 mm, stainless steel housing ~ 195 × 127 × 70 mm (each without connectors)

Weight ~ 950 g aluminium housing, stainless steel version ~ 2,5 kg

-20...+50 °C, storage temperature -35...+70 °C Ambient temperature Temperature class Aluminium housing T6 (T80 °C) at -20...+50 °C

Stainless steel housing T5 (T95 °C) at -20...+40 °C, T4 (T130 °C) at -20...+50 °C

Ambient humidity 0...95 % rH, non condensing Sensor circuit Internal intrinsically safe (IS) circuit

Sensor Piezo pressure transmitter

P+ / P- sleeves Ø 4...6 mm. OCT versions have 2 stainless steel (316L) tube connections for clamp ring fittings Ø 6 mm Pressure connection

±100 Pa, ±250 Pa, ±500 Pa, ±1.250 Pa, ±2.500 Pa, ±5.000 Pa, ±7.500 Pa in acc. to type Measuring range

Minimum measuring range is 20 % of full range (e.g. 20 Pa at ± 100 Pa sensor)

Response time of sensor T90 / 5 s

Accuracy of pressure < ±1 % typically, max. ±2 % of end value ±1 Pa $\pm\,0,05$ % typically, max. 0,25 % of end value Non linearity and hysteresis

Start delay

Setting zero point Via menu. Short-circuit mechanically both tube connectors P+ / P- for the moment of zero point setting Stability Long term stability < 0,2 %/year, temperature influence < 0,02 %/K, supply voltage influence < 0,01 %

Voltage U [V] or current I [mA], selectable on site via menu, protected against short circuit and external voltage up to 24 V and against polarity reversal Output

Voltage output U 0...10 VDC adjustable, invertible, burden > 1 k Ω , influence < 0,05 %/100 Ω

Current output I 0...20 mA adjustable, invertible, burden < 500 Ω , influence < 0,1 %/100 Ω , open circuit voltage < 24 V Output in alarm mode Increasing or decreasing output signal, selectable on site, down to 0 VDC/0 mA or up to 10 VDC/20 mA

SB 1.0 Wiring diagram

Scope of delivery Sensor, 3 self-tapping screws 4,2 × 13 mm resp. in stainless steel (with ...CT and ...VA versions), short circuit tube

Parameter at delivery min./max. pressure range limits (e.g. ExCos-P-100 = -100...+100 Pa), output 4...20 mA, output in alarm mode decreasing to 0 V/0 mA

Approbations

2014/34/EU ATEX directive EPS 14 ATEX 1 655 X EC type-approved **IECEx** certified IECEx EPS 14.0022X

Approval for gas II 2 (1) G Ex e ma [ia Ga] IIC T6...T4 Gb Types ...-CT, ...-OCT II 2 (1) G Ex e ma [ia Ga] IIB T6 Gb

Approval for dust II 2 (1) D Ex tb [ia Da] IIIC T80°C...T130°C Db IP66

CE identification CE № 0158 **EMC** directive 2014/30/EU

IP66 in acc. with EN 60529 **Enclosure protection EAC** TC RU C-DE.ГБ08.В.01510

TRGS 725

Special solutions and accessories

CT	Types in aluminium housing with seawater resistant coating,
	parts nickel-plated
OCT	Offshore version in aluminium housing with seawater resistant coating,
	parts nickel-plated
VA	Types in stainless steel housing, parts nickel-plated
OVA	Offshore version in stainless steel housing, parts nickel-plated
MKR	Mounting bracket for round ducts up to Ø 600 mm
Kit 2	Flexible pressure tube, 2 m, inner Ø 6 mm, 2 connection nipples
Kit-S8-CBR	2 cable glands M16 × 1.5 mm, Ex-e, brass nickel-plated, for cable Ø 510 mm
Kit-Offs-GL-CBR	2 cable glands M20 × 1.5 mm, Ex-d, Ms-Ni, for armoured cables
Kit-PTC-CBR	2 connecting tubes for tube fittings Ø 6 mm, stainless steel 316 L $$

Stainless steel weather shield

WS-CBR



...-CT

...-OCT

...-VA


...-OVA



Electrical connection

All sensors require a 24 VAC/DC power supply. The electrical wiring must be realized via the integrated Ex-e terminal box acc. to ATEX. The terminals' type of protection is "Increased safety Ex-e".

Attention: Before opening the terminal box cover, the supply voltage must be shut off! The supply has to be connected at terminals 1 $(-/\sim)$ and 2 $(+/\sim)$, the analogue output at terminals 3 (mA/V) and 4 (GND).

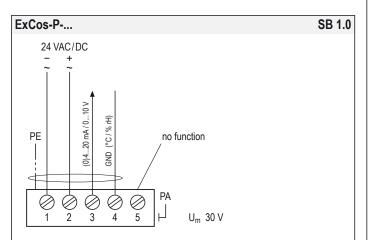

Intrinsically safe parameters (IS) - Internal pressure sensor

Uo	=	7.9 V
l _o	=	48 mA
P_0	=	95 mW

$$\begin{array}{c} C_i \rightarrow 0 \\ L_i \rightarrow 0 \end{array}$$

	IIC	IIB	IIA		
L _o	2 mH	5 mH	10 mH		
Co	1.3 µF	5.8 µF	7.1 µF		


Internal sensor IS values are corresponding to the internal pressure sensor. Due to the matter of fact that there is no external sensor connected, these IS values are not relevant for the customer but shown for the sake of completeness.

Zero point compensation

...Cos-P-... pressure sensors are equipped with a zero point compensation to adjust the module to the installation position. The pressure nipples P+/P- must be connected with a short circuit tube and the zero point compensation performed by following the menu for parametrisation (menu 18).

Before starting the zero point compensation, the device should be connected to power supply for a minimum of 15 minutes to reach the uniform working temperature!

Display, buttons and parameters

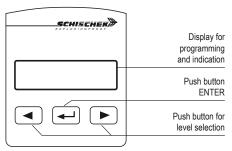

Change operation – parametrisation mode

To change from operation to parametrisation mode and vice versa, push \implies ENTER button for minimum of 3 seconds. Back to operation mode with menu "save".

Indication of data logging

A flashing star in the display shows that data is received and the device is working.

Password input

The default/delivery setup is 0000. In this configuration the password input is not activated. To activate the password protection (menu 20) change the 4 digits into your choosen numbers (e.g. 1234) and press ENTER.

Please keep your password in mind for next parameter change! Due to a new parameter setup the password is requested.

Important information for installation and operation

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations must be complied with. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used.



Attention: Apply all Ex rules and regulation before opening the internal terminal box. Do not open cover when circuits are live!

Draw the wiring cables through the cable glands. For connection use the internal Ex-e approved terminal box and connect equipotential bonding.

After connection install the cables in a fixed position and protect them against mechanical and thermical damage. Close all openings and ensure IP protection (min. IP66).

Avoid temperature transfer and ensure not to exceed max. ambient temperature! For outdoor installation a protective shield against sun, rain and snow should be applied. After mounting and installation a zero point compensation must be done to ensure correct measurement results (see description).

Sensors are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Clean with damp cloth only.

Ex sensors must not be opened and repaired by the end user.

B. Long cabling

We recommend using shielded signal wires and to connect one end of the shield to the \dots Cos- \dots terminal box.

C. Separate ground wires

For supply and signal wires use separate grounds.

ExCos-P_er V04 – 22-Feb-2024



...-CT ...-OCT

...-VA

...-OVA



Para	metri	sation and commissioning					ясніяснек»			
To change from operation to parametrisation mode push the "ENTER" button ← for minimum 3 seconds. If password protected: type password and push ←. Back over to menu "Save" and exit.			Operation → Parametrisation push for min. 3 s		4 •	Example:	Menu language Range Output Output Ex-i	English -25+25 Pa 420 mA 020 mA		
Menu		Function	ENTER	Indication	Select	ENTER	Next indicati	on Se	elect ENTER	Next menu
Menu	1	DE, EN, FR Select language: German, English, French	4	DE, EN, FR English Deutsch, English, Francai		4				
Menu	2	no function – menu skip		Bottoon, English, Hulloui						
Menu	3	no function – menu skip								
Menu	4	Unit sensor Select physical unit	4	unit sensor Pa Pa, mbar, inH ₂ O		4				•
Menu	5	Range Adjust the measuring range	4	range -25100 Pa -adjust lower limit		4	range -25 25 Pa	nigher limit		•
Menu	6	no function – menu skip		adjust 101101 mm			dajasti	ngnor min		
Menu	7	Output V, mA Select output signal as V or mA		output V/mA mA V, mA		4				•
Menu	8	Output range Adjust output range		output range 420 mA adjust lower limit		4	output range 420 mA	nigher limit		•
Menu	9	Sensor error Select signal at sensor error		sensor error 10 V/20 mA 10 V/20 mA or 0 V/0 m/		4	uujust i	ngner mint		•
Menu	10	Output ∠ \(\subseteq \) Select signal output behaviour		output ∠ \sigma increasing ∠ \sigma increasing, decreasing		4				•
Menu	11	no function – menu skip		<u> </u>						
Menu	12	no function – menu skip								
Menu	13	no function – menu skip								
Menu	14	no function – menu skip								
Menu	15	no function – menu skip								
Menu	16	no function – menu skip								
Menu	17	no function – menu skip								
Menu	18	Zero point compensation After short circuit the pressure nipples P+/P- the sensor gets a zero point calibration		set zero point yes no		4				•
Menu	19	Display function Select display settings	4	display function on illuminated on, on illuminated, off		4				•
Menu	20	Password Select password protection	4	new password yes no		4	password 0000			P
Menu	21	Save and exit Select: save data, factory setting, discard or back to menu	4	save and exit save data save data, factory setting,	discard, back to menu	4				P
Menu	22	Set offset Add/subtract offset from measure value	4	set offset 0.00 Pa		4				P
Menu	23	no function – menu skip								
Menu	24	Attenuation Damping the output signal (signal filter)	4	attenuation 0		4				•

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com



...-CT

...-OCT

...-VA

...-OVA



