

Volume Control Sensor with resistance output signal in hazardous locations zones 1 and 2.

ATEX compliant

VFK-07-2G

APPLICATIONS


VFK-07-2G is a sensor with passive resistance output signal for volume control in room and for duct. In combination with EEx-i transducer Type EXL-IMU-1 with intrinsic safe circuit the sensors may be used in hazardous areas zones 1 and 2. The transducer changes the resistance output into an active signal 0... 10 V/0(4)... 20 mA, angle SQRT to m/s

TECHNICAL DATAS

Type	VFK-07-2G
Supply	by EXL-IMU-1
Mounting position	vertical, vibration free
Measuring from	volume stream - air
Sensor	3-wire, resistance linear
Scale	m/s (Value acc. to order information)
Measuring range	acc. to calculation of probe (pilot head, pilot cross, baffle)
Measuring accuracy*	1,5% of max. value
Min./max. pressure	±0,9 Pa, temporal unlimited
Ambient temperature	0... 60 °C
Housing material	Makrolon 30% GF
Installation	vertical, on walls
Connecting terminals	max. 2,5 mm ²
Protection acc. to EN60529	IP40
Weight	3,5 kg
Medium	gaseous, not aggressive
Max. cable length	Between measuring point and ring balance < 50 m.
Including	sensor
Installation area	The ring balance can be used in hazardous areas, zones 1 and 2 together with the transducer EXL-IMU-1.

*with constant temperature on the ring balance output value of the transducer will change about 0,1%/K temperature change at the ringbalance.

II2G EEx ia IIC T6
Zone 1, 2
acc. to ATEX

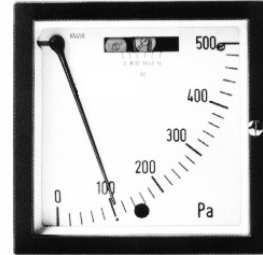

EEx-i CIRCUITS - TABLE 1

Operation values maximum at terminal

Terminals		A-S-E
Voltage	Ui	9 VDC
Current	Ii	5 mA
Power	Pi	10 mW
Capacity	Ci	< 20 pF
Inductivity	Li	negligible

The maximum values must not be exceeded!

Please check your external capacities and inductivities in acc. to the length of the cable and the method of installation.

MOUNTING AND INSTALLATION

- Mounting: Vertical on the wall or panel.
- Open valves: The valves "V" prevent the drain of the sealing liquid during the transport. When in operation, turn both screws in counterclockwise direction to their end positions.
Attention: Partly opened valves are not gastight, explosive gas can issue at this position.
- Locking screw: Turn the locking screw "A" in counterclockwise direction to its end position. The pointer should now balance out to "0".
- Correct zero settings: Use screw "N".
- Process connections:
 - left side - higher pressure P+
 - right side - lower pressure (or suction) P-
 - differential pressure higher pressure left side P+ • right side - lower pressure
 - max. length of tubes - 50 m
- Close front door: Place slot vertically and press in screw firmly.

IMPORTANT

The ringbalance instrument contains filling fluid. Before dismantling or transporting:

- Lock down the ringbody: Use screw "A" while pointer is held on the dot near zero.

RECOMMENDED TRANSDUCER

- Transducer Mfr. Schischek Type EXL-IMU-1.
- In combination with transducer EXL-IMU-1 is intrinsic safety proof for simple circuits given.
- Manufacturer declaration zone 1 and 2.

MAINTENANCE

The ring balance is maintenance free.


ATTENTION!

- For installation, use and maintenance the official standards and rules must be applied.
- The energy of intrinsically safe circuits are below the level to start an explosion in the event of a spark.
- Intrinsic safe circuits must be installed with light blue coloured and separate from non intrinsic safe circuits.
- The sensor is passive and potential free for use in hazardous locations in zone 1, 2.
- Pay attention to the max values for wiring, listed in table 1.
- Avoid electrostatic discharge.
- Only wet cleaning.


Important:

Don't tip over the ringbalance after opening the valves "V" because the sealing liquid will drain.

ELECTRICAL CONNECTION

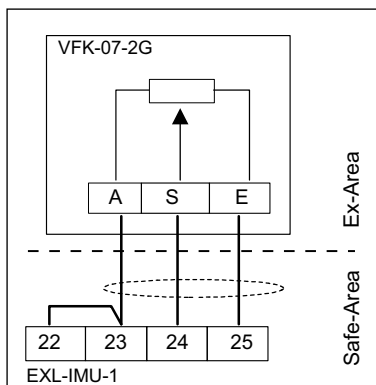

DIMENSIONS

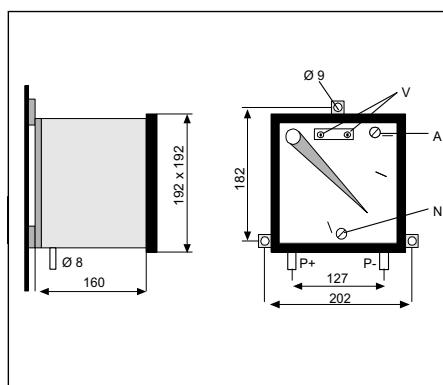

subject to change