

**Volume Control Sensor**  
**0 ... 7 m/s**

**Volume Control Sensor with resistance output signal  
in hazardous locations zones 1 and 2.**

**VFK-07-2G-FP 0/7**  
**ATEX compliant**

**APPLICATIONS**

**VFK-07-2G-FP** is a sensor with passive resistance output signal for volume control in room and for duct. In combination with Ex-i transducer Type EXL-IMU-1 with intrinsic safe circuit the sensors may be used in hazardous areas zones 1 and 2. The transducer changes the resistance output into an active signal 0... 10 V/0(4)... 20 mA, angle SQRT to m/s

**TECHNICAL DATAS**

<b>Type</b>	<b>VFK-07-2G-FP 0/7</b>
Supply	by EXL-IMU-1
Mounting position	vertical, vibration free
Measuring from	volume stream - air
Sensor	3-wire, resistance linear
Measuring range	0 ... +7 m/s
Measuring accuracy*	1,5% of max. value
Min./max. pressure	900 Pa, temporal unlimited
Ambient temperature	0... 60 °C
Housing material	Makrolon 30% GF
Installation	vertical, on walls
Connecting terminals	max. 2,5 mm <sup>2</sup>
Protection acc. to EN60529	IP65
Weight	3,5 kg
Medium	gaseous, not aggressive
Max. cable length	Between measuring point and ring balance < 50 m.

**Including** sensor  
**Installation area** The ring balance can be used in hazardous areas, zones 1 and 2 together with the transducer EXL-IMU-1.

\*with constant temperature on the ring balance output value of the transducer will change about 0,1%/K temperature change at the ringbalance.

suitable for  
**Zone 1, 2**  
acc. to ATEX



**Ex-i CIRCUITS - TABLE 1**

**Operation values maximum at terminal**  
Simple apparatus suitable for Zone 1, 2  
Only for connecting to intrinsically safe circuits with max values

<b>Terminals</b>	<b>A-S-E</b>
Voltage U <sub>o</sub>	9 VDC
Current I <sub>o</sub>	5 mA
Power P <sub>o</sub>	10 mW
Capacity C <sub>i</sub>	< 20 pF
Inductivity L <sub>i</sub>	negligible

**The maximum values must not be exceeded!**  
Please check your external capacities and inductivities in acc. to the length of the cable and the methode of installation.


**MOUNTING AND INSTALLATION**

1. Mounting: Vertical on the wall or panel.
2. Open valves: The valves "V" prevent the drain of the sealing liquid during the transport. When in operation, turn both screws in counterclockwise direction to their end positions.  
Attention: Partly opened valves are not gastight, explosive gas can issue at this position.
3. Locking screw: Turn the locking screw "A" in counterclockwise direction to its end position. The pointer should now balance out to "0".
4. Correct zero settings: Use screw "N".
5. Process connections:
  - left side - higher pressure P+
  - right side - lower pressure (or suction) P-
  - differential pressure higher pressure left side P+      • right side - lower pressure
  - max. length of tubes - 50 m
6. Close front door: Place slot vertically and press in screw firmly.

**IMPORTANT**

The ringbalance instrument contains filling fluid. Before dismantling or transporting:  
1. Lock down the ringbody: Use screw "A" while pointer is held on the dot near zero.  
2. Close both valves "V".

**ELECTRICAL CONNECTION**

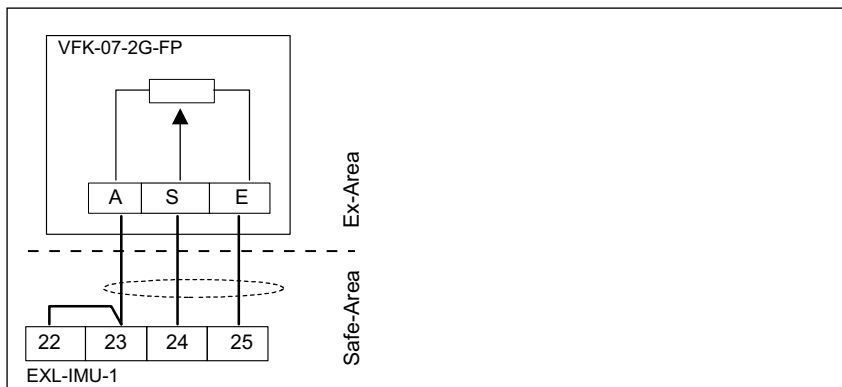

**RECOMMENDED TRANSDUCER**

- Transducer Mfr. Schischek Type EXL-IMU-1.
- In combination with transducer EXL-IMU-1 is intrinsic safety proof for simple circuits given.
- Manufacturer declaration zone 1 and 2.

**MAINTENANCE**

The ring balance is maintenance free.

**ATTENTION!**

- For installation, use and maintenance the official standards and rules must be applied.
- The energy of intrinsically safe circuits are below the level to start an explosion in the event of a spark.
- Intrinsic safe circuits must be installed with light blue coloured and separate from non intrinsic safe circuits.
- The sensor is passiv and potential free for use in hazardous locations in zone 1, 2.
- Pay attention to the max values for wiring, listed in table 1.
- Avoid electrostatic discharge.
- Only wet cleaning.

**Important:**

Don't tip over the ringbalance after opening the valves "V" because the sealing liquid will drain.

subject to change